

CATCH LOCKS



Use standard care and caution and follow these warnings:

- During the assembly, check that distance between door and pillar allows the nib, when fully out, to go beyond the centre of the keeper roller by at least 3 mm.
- When the door is closed, ensure that the nib is fully extended under the roller.
- Do not close the door if locked, the key barrel might break.